 


# CDL Components

## Components for CDL Data-Logger

 
1.

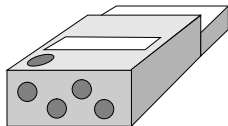

### CDL Data-Logger

- CDL-1U / -2U / -4U  
please see separate leaflet

2.

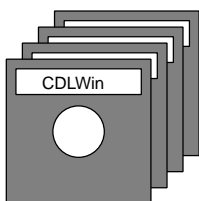

### Evaluation Software CDLWin

for programming, readout and evaluating of all CDL Data-Loggers

3 1/2"-disk, software and manual in English language  
(further languages on request)

- CDLWin

as option

### Communication via modem

 
 
### CDL-Installation/Introduction

Installation of the software, introduction of the operating staff

1/2 day, location as agreed

- CDL-Install

3.

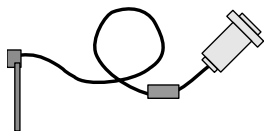

### Pulsers

Several pulsers fitted with the CDL-pulse plug for our water meters are available:

- Pulser K 01                      incl. CDL pulse plug
- Pulser K 02                      incl. CDL pulse plug
- Pulser R 02.2                    incl. CDL pulse plug
- Pulser RD 022                    incl. CDL pulse plug

For very detailed measurements at very low flowrates (leakage control) a high resolution pulser is available:

#### For unidirectional measurement:

- Pulser OP 06                      incl. CDL pulse plug
- Pulser OD 06                      incl. CDL pulse plug

 
#### For bidirectional measurement (only with CDL-1U/-2U/-4U):

- Pulser OP 07-L                    incl. CDL pulse plug
- Pulser OD 07-L                    incl. CDL pulse plug

If other pulsers (gas, electricity, mag meters) are to be connected, a single pulse plug with wiring diagram is available.

- CDL pulse plug

4.

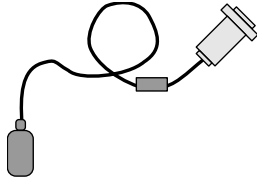

## CDL-Pressure Sensors

### CDL-pressure sensor for CDL-DA:

(to connect the CDL-4U, -2U, -1U a special connector [Pos. 8] is necessary)

- CDL-DS 0 ... 1 bar 3/8"
- CDL-DS 0 ... 7 bar 3/8"
- CDL-DS 0 ... 20 bar 3/8"
- CDL-DS 0 ... 10 bar 1/4"

### CDL-pressure sensor for CDL-4U, CDL-2U and CDL-1U:

- CDL-DS 0 ... 10 bar 1/4"

 
Further pressure ranges (0.1 ... 200 bar) on request

### CDL-Subfloor Hydrant Connector


To connect the CDL-pressure sensors to a subfloor hydrant there is a special connector available:

The connection is dependent on the pressure sensor

- Subfloor hydrant connector CDL-HYCON 3/8"
- Subfloor hydrant connector CDL-HYCON 1/4"

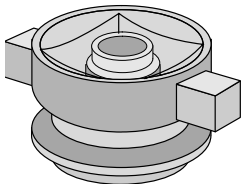

5.

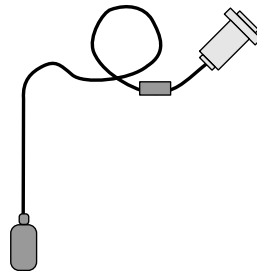

## CDL-Level Sensor

For level measurement at reservoirs (measuring range 0 ... 10 m)  
or for depth measurement in wells

### CDL-level sensor for CDL-DA:

 
(to connect the CDL-4U, -2U, -1U a special connector [Pos. 8] is necessary)

- CDL-level sensor CDL-FS 0 ... 10 m (IP 68) with 15 m special cable

### CDL-level sensor for CDL-4U, CDL-2U and CDL 1U:

- CDL-level sensor CDL-FS 0 ... 10 m (IP 68) with 15 m special cable

6.



## CDL-Current Interface

All standardized sensors (ph value, magmeter etc.) can be connected to CDL-logger using the CDL current interface.

The measuring circuit needs external feed.

### CDL-current interface for CDL-DA

 
(to connect the CDL-4U, -2U, -1U a special connector [Pos. 8] is necessary)

- CDL-current interface CDL-IF 0 ... 20 mA
- CDL-current interface CDL-IF 4 ... 20 mA

### CDL-current interface for CDL-4U, CDL-2U and CDL-1U:

- CDL-current interface CDL-IF 0 ... 20 mA
- CDL-current interface CDL-IF 4 ... 20 mA

7.



### CDL-Temperature Interface

 
to connect a standard PT 100 temperature sensor to the analog input of the logger

**CDL-temperature interface for CDL-DA/CDL-4U \***

\* to connect the CDL-4U, -2U, -1U a special connector [Pos. 8] is necessary.

- CDL-temperature interface CDL-TI 0 ... 50 °C
- CDL-temperature interface CDL-TI 0 ... 130 °C

8.




### CDL-Analogadapter

to connect the earlier analog sensors to the new loggers CDL-4U, CDL-2U, CDL-1U this special adapter is necessary

- CDL-Adapter

 9.



### CDL/PC-Connection Cable

to connect the CDL Data-Logger to the serial interface of the PC 9-pin PC connector with an adapter for 25-pin connectors.

- CDL-PC CABLE 9/25 pins

10.



 
### CDL-Controller

Test plug to check the CDL Data-Logger and the connected pulsers.

For the loggers CDL/LCD, CDL-4U, CDL-2U and CDL-1U this plug is not necessary.

- CDL-CONTROLLER

11.

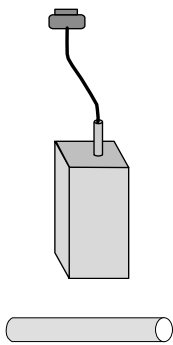

### CDL-Replacement Battery for CDL/ALU

The CDL-replacement battery consists of the battery holder, the connection cable and 6 x 1.5 V alkaline cells.

For CDL/ALU the alkaline batteries may be replaced by commercial pen light batteries.

- Replacement Battery CDL/ALU: 9V

 
**Lithium-Special Battery for CDL/LCD**

- Lithium-Special Battery CDL/LCD: 7V

**Batteries for CDL-4U, CDL-2U, CDL-1U**

For CDL-4U, CDL-2U and CDL-1U commercial Mignon cells can be used.

12.

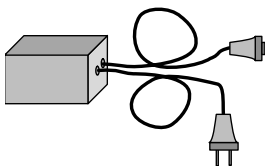

### CDL-Main Supply Unit 230/115 V AC

 
to power the logger from the mains instead of the internal batteries.

The batteries have to remain in the logger as a buffer.

- CDL-POWER 230/12 V

For remote readout a number of accessories are available:

13.




### CDL/Modem-Connection Cable

to connect the CDL Data-Logger to a telephone modem.

- CDL/MOD Cable

14.

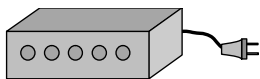


### CDL-Modem

Approved modem to connect the CDL Data-Loggers to a telephone line.  
Power supply 230 V.

At the other end at the PC a second modem is necessary.

- CDL Modem

 15.



### Battery Modem

to connect the CDL-logger to the telephone network.

The modem is battery powered and can be activated via PC or CDL-4U.

The housing is waterproof (IP 68)

- CDL Battery Modem